

SERIAL HAND RAISER USER GUIDE

An accessible serial hand raiser device

[Milad Hajihassan](#)


<https://github.com/milador/Serial-Hand-Raiser>

Contents

Usage..... 2

Usage

1. Connect the Serial Hand Raiser to your host device (Example: computer) via a USB-C to USB-B or USB-C to USB-C cable based on USB port type supported by the host device.
2. Download and install [Microsoft Edge](#) or [Chrome](#) web browser on your host device.
3. Open [Microsoft Edge](#) or [Chrome](#) web browser on your host device.
4. Enter following link in the address bar of your web browser:
https://milador.ca/projects/serial_hand_raiser/
5. Press **Enter** to open the web page
6. Click on the **CONNECT** button and select the port number of your Serial Hand Raiser device. (Example: COM XX : Adafruit QT Py)

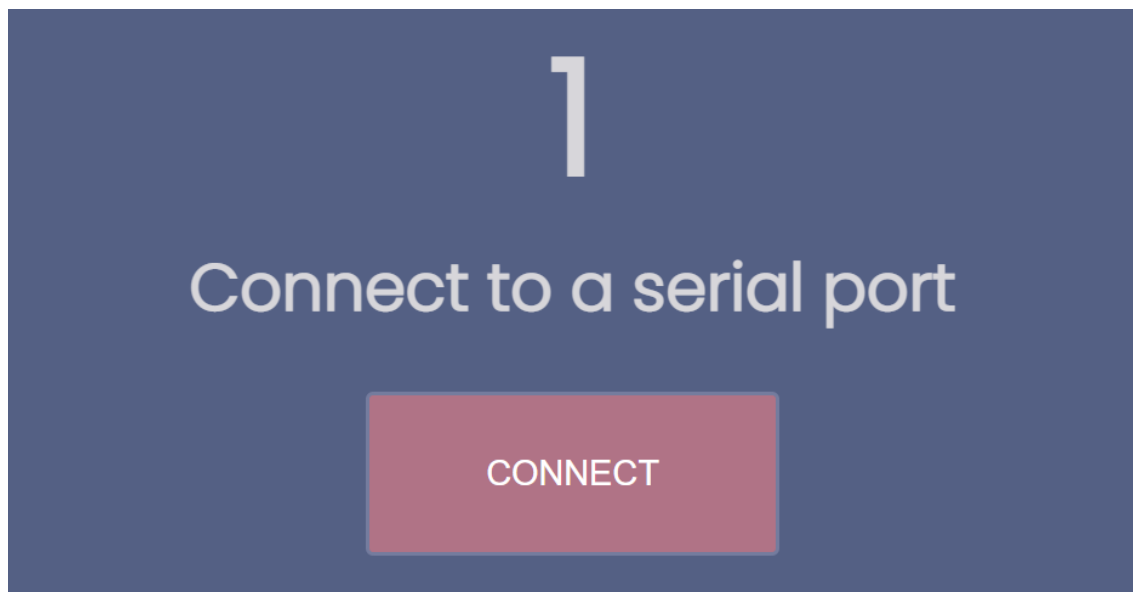

7. Now click on **Connect** button from dialog box.
8. The action buttons from step 2 should now change color from purple to magenta.



9. You can click or press on button actions to perform the action.
10. Finally, you can click on the color palette displayed in step 3 section and change the color.

